

Filter units F-703 and F-704 are the liquid phase filter units with an exchangeable used in industrial gas installations, low-speed vehicles and autogas vehicles

1. Exchange the filter cartridge or the filter unit after maximum 10 000 km for the motor vehicles or 200 hours of engine work (200 mth)*
2. Install the filter according to the flow direction shown on the body (a pointer).
3. Avoid any mechanical damages while installing the filter unit and during its usage.
4. Do not use with pressure over 3000 kPa.
5. Work temperature range from -20°C to 120°C.
6. Check the installation tightness after installing the filter.
7. Use only original elements while replacing or cleaning.
8. Exchange all o-rings while exchanging the filter cartridge.
9. Clean the filter cartridge with compressed air, extractive petrol, acetone or other cleaning substances.
10. The filter cartridge exchange or cleaning must be held at least once a year.**
11. Avoid any mechanical damages while cleaning the filter cartridge or the filter unit. Do not clean mechanically.
12. Remove the filter from the installation before exchanging the filter cartridge.
13. Set the filter unit in a vice or any other proper handle before disengaging.
14. Hold all installation, exchanging the filter cartridge or the filter unit and any repairs in the certified services.
15. Use the filter only for what it was intended.



* Liveliness of the filter unit depends on the fuel quality. It is recommended to refuel in the certified petrol stations.

** Depending on the intensity of the filter work and the fuel quality.

APPROVALS:



67R-010957

class 1